

ALUDRA TKL

GHID DE INSTALARE RAPIDA
QUICK START GUIDE



RO / EN



Ghid de instalare rapida
Quick Start Guide

CONTINUTUL PACHETULUI

INSIDE THE BOX

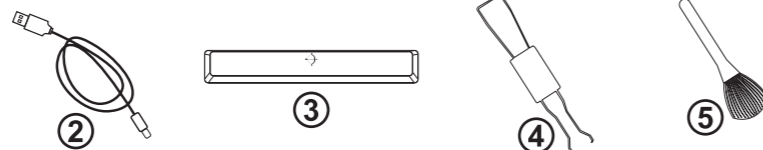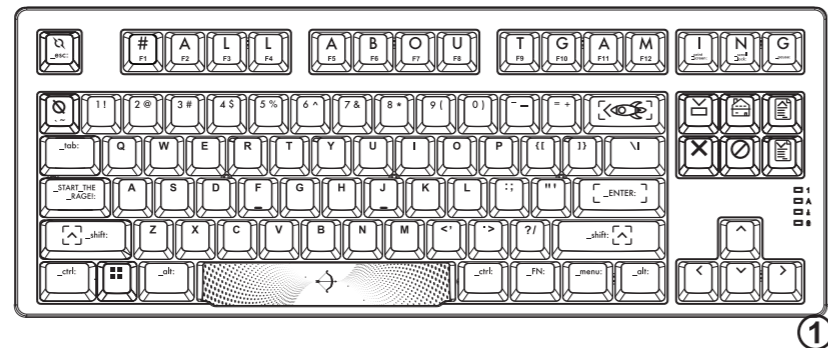

RO

1. Tastatura mecanica ALUDRA TKL
2. Cablu detasabil USB Type-C
3. Tasta spacebar subtire
4. Extractor capace taste si contacte mecanice
5. Perie de curatare

EN

1. ALUDRA TKL mechanical keyboard
2. USB Type-C detachable cable
3. Extra slim spacebar
4. Keycap and Switch extractor
5. Cleaning brush



Ghid de instalare rapida
Quick Start Guide

FUNCTII MULTIMEDIA

MULTIMEDIA SHORTCUTS







- Fn + F1** Player Media / Music Player
- Fn + F2** Volum - / Volume -
- Fn + F3** Volum + / Volume +
- Fn + F4** Opreire sunet / Mute
- Fn + ** Blocare tasta Windows / Windows key lock
- Fn + F5** Melodia anterioara / Previous track
- Fn + F6** Melodia urmatoare / Next track
- Fn + F7** Play/Pauza / Play/Pause
- Fn + F8** Stop / Stop
- Fn + F9** Email / Email
- Fn + F10** Acasa / Home
- Fn + F11** Blocare taste / Key lock
- Fn + F12** Calculator / Calculator



Ghid de instalare rapida
Quick Start Guide

ILUMINAREA LATERALA

SIDE BACKLIGHT




- Fn + ** Efecte de iluminare / Illumination effects
- Fn + ** Iluminare cu o singura culoare / Single color mode
- Fn + ** Creste viteza iluminarii / Increase illumination speed
- Fn + ** Scade viteza iluminarii / Decrease illumination speed
- Fn + ** Creste luminozitatea / Increase illumination brightness
- Fn + ** Scade luminozitatea / Decrease illumination brightness

RO Nota: indicatorii LED vor ilumina intermitent de 3 ori atunci cand selectati ultimul nivel de viteza sau luminozitate.

EN Note: the LED indicators will flash 3 times when you have selected the last level of speed or brightness.

ILUMINAREA TASTELOR

KEYS BACKLIGHT

- Fn + ** Efecte de iluminare / Illumination effects
- Fn + ** Culori pentru iluminare / Illumination colors
- Fn + 1/2/3** Profiluri personalizate de iluminare / Custom illumination profiles
- Fn + ** Modul personalizare / Customization mode



Ghid de instalare rapida
Quick Start Guide

ILUMINARE PERSONALIZATA

CUSTOM ILLUMINATION

RO

1. Selectati un profil de iluminare personalizat (FN + 1, 2 sau 3).
2. Apasati FN + Print Screen pentru a intra in modul personalizare; LED-urile de notificare se vor aprinde intermitent si iluminarea tastelor se va stinge.
3. Apasati tasta pe care o doriti iluminata (pentru modificarea sau oprirea iluminarii apasati de mai multe ori pe tasta) si repetati pana ajungeti la rezultatul dorit. Cand personalizarea este finalizata apasati din nou FN + Print Screen pentru a salva modificarile.

EN

1. Choose a custom illumination profile (FN + 1, 2, or 3).
2. Press FN + Print Screen to enter the customization mode; the notification lights will flash, and the illumination of the keys will turn off.
3. Press the key you want to keep lit (press several times to change or turn off the light) and repeat the action until you reach the desired result. When customization is complete, press FN + Print Screen again to save the changes.

AJUSTAREA LUMINOZITATII

BRIGHTNESS ADJUSTMENT

RO

1. Apasati FN + Sageata Sus pentru a creste luminozitatea.
2. Apasati FN + Sageata Jos pentru a scadea luminozitatea.

Nota: sunt disponibile 5 niveluri de luminozitate; indicatorii LED vor ilumina intermitent de 3 ori atunci cand selectati ultimul nivel.

EN

1. Press FN + Up Arrow to increase the brightness.
2. Press FN + Down Arrow to decrease the brightness.

Note: there are 5 levels of brightness available; the LED indicators will flash 3 times when you have selected the last level.

